



Application Note AN-PAN-1056

Online monitoring of sodium in industrial power plants

Energy supply has become a major issue in modern times. The global population increases each year by approximately 80 million people, which combined with longer lifespans and the ever-growing demand for electronic devices, means rising energy consumption. Therefore, power plants have to work at maximum efficiency to meet the high demand. Fossil fuel and nuclear power plants generate most of the electricity for our needs. These methods of energy

production involve water-steam circuits that drive turbines. Thermal power plants utilize the heat generated by combustion or nuclear fission to produce steam, which is fed into a turbine driving a generator that converts the mechanical energy into electrical energy. Downstream of the turbine, a condenser transforms the steam into water, which flows into a feed tank from where it is pumped back into the steam boiler for reuse.

Cooling water flows through the condenser in a separate circuit, removing the heat of condensation released by the steam via a heat exchanger. Nuclear power plants with pressurized water reactors have an additional water circuit known as the primary circuit. This extra segment ensures that radioactive materials remain contained within and do not disperse to the secondary circuit, and therefore potentially outside to pollute the environment.

In thermal power plants, water is essential since it is used as a central (operating) medium. As a liquid, it is necessary for cooling, and as a gas, it drives the

turbines. In nuclear power plants, it also moderates the fission neutrons and thus controls nuclear fission. Therefore, monitoring the water chemistry in power plants for impurities is of paramount importance, as it gets reused several times and can cause many problems along the circuits.

Within the context of ensuring high throughput of power plants, online analysis of critical parameters in these water circuits such as chloride, sodium, phosphate, sulfate, ammonia, hydrazine, and silica is highly advantageous for safety, protection, and process optimization.

INTRODUCTION

Sodium monitoring is commonly used to detect salt contaminants in the water demineralization (DM) plant (**Figure 1**). In power plants, ion exchange demineralizers are used to remove unwanted impurities (e.g., chloride, sulfate, carbonates, and sodium) from the source water. However, the cation resin bed is sensitive and must be constantly monitored to detect possible breaks and leaks. If this happens, contaminants can leach into the purified

water, eventually causing stress corrosion cracking and corrosion fatigue of stainless steel components (e.g., turbine blades) further downstream. Therefore, highly sensitive sodium measurements are critical at the outlet of the ion exchanger, to indicate when the resin bed requires regeneration and whether the water purity is high enough to avoid scaling on company assets.

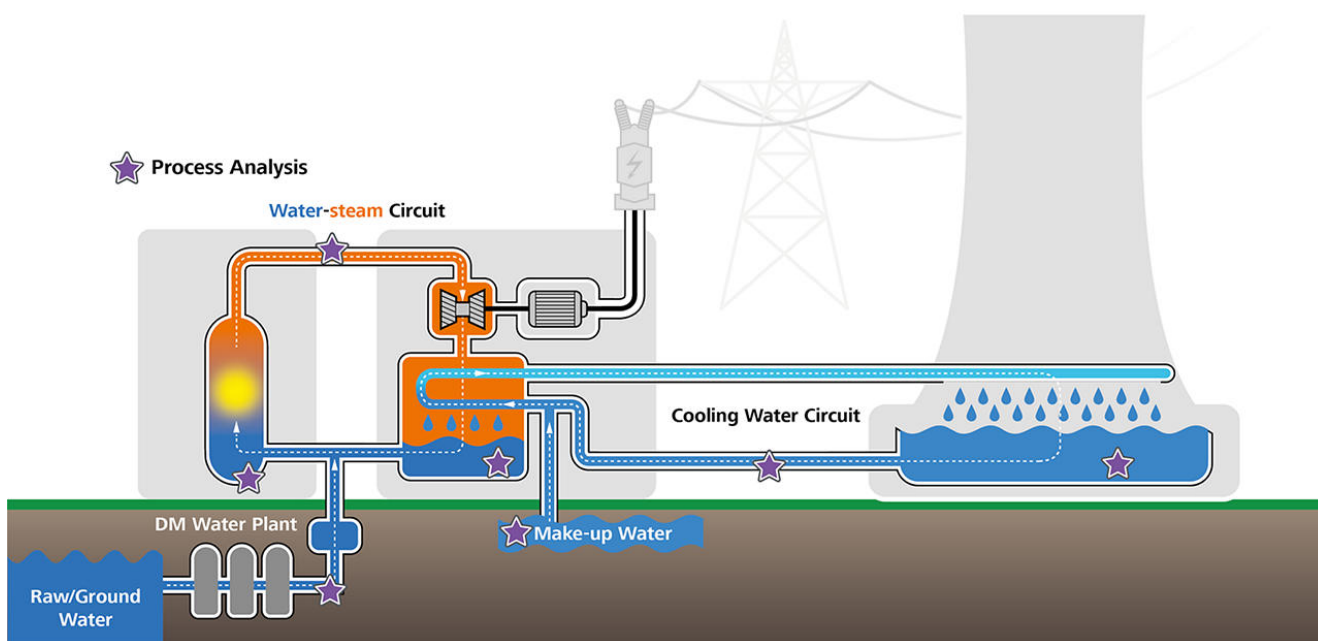


Figure 1. Generalized overview of the power production process. Stars denote suggested online process analysis measurement points.

INTRODUCTION

For a power plant to operate at maximum efficiency, the steam boiler has to also work in the most effective, efficient, and safe manner. At elevated temperatures, salts of the alkali metals (e.g., sodium carbonate) can deposit on heat transfer surfaces. This scaling acts as an insulating layer that reduces heat transfer, translating to costly plant downtimes.

Additionally, monitoring sodium content in both steam and condensate is necessary. High sodium content in the condensate indicates possible condenser leakage, and a low value suggests possible sodium deposition in the steam circuit. Therefore, constant analysis of the water chemistry in the boiler is of utmost importance to avoid accumulation of corrosive salts, reduce risk of caustic gouging, and detect early contaminant ingress in the steam.

By using online process analyzers, operators gain the most representative, up to date information they need to accurately identify trends (Figure 2), reduce downtimes, and address operational issues before costly problems arise. In addition, the time of response to corrosion formation is fast and immediate warnings are delivered in case of out-of-specification readings.

APPLICATION

Low sodium concentrations are conventionally determined by ion-selective electrodes (ISE) and an ammonium or diisopropylamine buffer as a direct measurement technique. In contrast, the 2035 Process Analyzer from Metrohm Process Analytics (Figure 3) measures sodium online using a polymer membrane ISE which requires no buffer solution. The mode of operation is simple: the polymer membrane contains a molecule (ionophore) that binds only with Na ions. When these ions penetrate the membrane, they cause a change in potential that corresponds to the concentration level of sodium present in the sample.

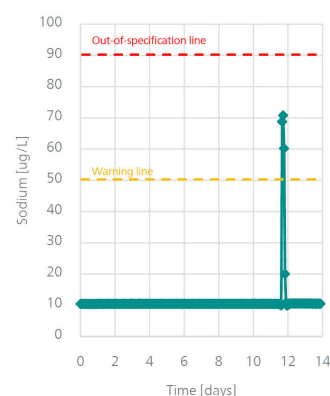


Figure 2. Trend chart of sodium (Na) showing a spike in concentration over a period of 14 days, which could lead to possible corrosion/scaling effect. The dashed lines are control measure guides, which can be changed depending on your process requirements.

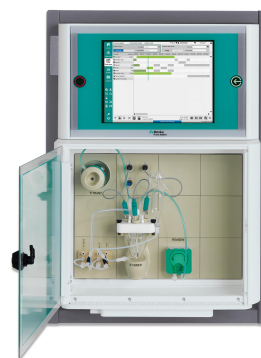


Figure 3. 2035 Process Analyzer for sodium monitoring in power plants.

This technique is called dynamic standard addition (DSA, **Figure 4**), which consists of the combination of a high precision burette dosing system and high performance ISEs. This method has been specially developed to work with ion-selective electrodes. A small, precise amount of sample is routed to the process analyzer from the stream, a temperature compensated measurement is performed, and the instrument instructs its burette to add a calculated amount of standard solution to the sample. Then the measurement is repeated, and the analyte concentration is calculated from the difference. Thus, the result for each analysis is validated and unaffected by matrix effects of the sample. The addition of standard can be repeated to achieve a more accurate result. This method is highly sensitive to monitor the sodium content, allowing early detection and therefore protecting costly assets.

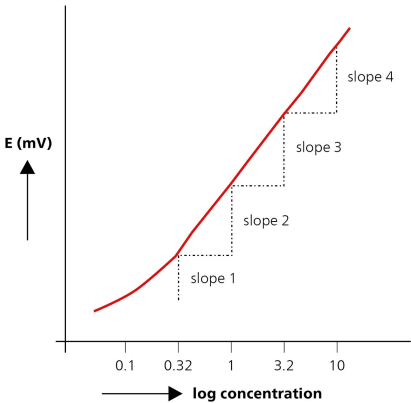


Figure 4. Na ISE calibration graph with multiple slopes.

Table 1. Parameters for low sodium determination online in power plants.

Parameter	Temperature	pH	Range
Sodium	<40 oC	>4	0–100 µg/L

CONCLUSION

Not only do dedicated online process analyzers help to safeguard plant operation and optimize process efficiency, they also provide a continuous record of plant operating conditions (**every 30 minutes**) for increased uptimes, as well as facilitate long-term improvements in productivity. Representative data is acquired at regular intervals without needing to wait for laboratory results, and out-of-specification

readings can immediately inform operators to take direct action.

The Metrohm Process Analytics 2035 Process Analyzer can reliably measure low amounts of sodium in process water. Additionally, it offers automated analysis results for different parts of a power plant and helps to safeguard plant operations.

BENEFITS FOR TITRATION IN PROCESS

- High accuracy for lower detection limits of sodium
- Increased longevity of valuable company assets
- Monitor multiple sample streams (up to 10) for more savings per measurement point and results
- Safer working environment and automated sampling
- Automatic ISE calibration for more accurate and reliable results
- Fully automated diagnostics – automatic alarms for when samples are out of specification parameters



REMARKS

Detection limits are in the sub- $\mu\text{g/L}$ range. Sodium can also be measured with online ion

chromatography if other cations also have to be determined.

FURTHER READING

Related application notes

[AN-PAN-1016 Silica in boiler feed water](#)

[AN-PAN-1013 Online analysis of boric acid in cooling water PWRs](#)

[AN-PAN-1032 Monitoring corrosion in power plants: online ultratrace analysis of Fe and Cu](#)

[AN-PAN-1038 Power generation: Analysis of the m value \(Alkalinity\) in cooling water](#)

[AN-PAN-1042 Online trace analysis of anions in the](#)

[primary circuit of nuclear power plants](#)

[AN-PAN-1043 Online trace analysis of cations in the primary circuit of nuclear power plants.](#)

[AN-PAN-1044 Online trace analysis of amines in the alkaline water-steam circuit of power plants](#)

[AN-PAN-1045 Online monitoring of copper corrosion inhibitors in cooling water](#)

FURTHER READING

Related brochures from Metrohm

[Online measuring instruments for power plant analysis – Monitoring and protection against corrosion](#)

[2035 Process Analyzer – Multi-purpose analyzer for the online monitoring of industrial processes and waste waters](#)

CONTACT

Metrohm Inula
Shuttleworthstraße 25
1210 Wien

office@metrohm.at

CONFIGURATION



2035 Process Analyzer – Potentiometrie

Der 2035 Process Analyzer verwendet für die potentiometrische Titration und ionenselektive Messungen spezielle Titrimittel und Elektroden. Diese Gerätevariante des 2035 Process Analyzers ist zudem geeignet für ionenselektive Analysen mit Hochleistungselektroden von Metrohm. Dieses genaue Standardadditionsverfahren ist ideal für kompliziertere Probenmatrices.

Die potentiometrische Gerätevariante des Analysengeräts bietet unter allen auf dem Markt angebotenen Messverfahren die genauesten Resultate. Mit weit mehr als 1000 bereits verfügbaren Applikationen ist auch die Titration in nahezu allen Industriezweigen eines der meist eingesetzten Verfahren zur Analyse Hunderter von Komponenten und reicht von der Säure-Base-Analyse bis zur Bestimmung der Metallkonzentrationen in Galvanikbädern.

Die Titration ist eine der gängigsten chemischen Absolutmethoden, die heute verwendet wird. Das Verfahren ist unkompliziert und benötigt keine Kalibrierung.

In dieser Konfiguration erhältliche Titrationsvarianten:

- Potentiometrische Titration
- Kolorimetrische Titration mit
Lichtleitertechnologie
- Wassergehaltsbestimmung nach der Karl-
Fischer-Titrationsmethode