



Application Note AN-PAN-1004

ABC Titration: Analysis of alkali, carbonate, hydroxide, and sulfide in pulping liquors

The breakdown process from solid wood to paper involves quite a number of preparative steps. The main process which converts wood into pulp is named the **Kraft process**, which utilizes white liquor (a mixture of sodium hydroxide «NaOH» and sodium sulfide «Na₂S») to break down the lignin and cellulose linkages.

In the Kraft pulping process, the wood chips are

saturated with white liquor and cooked at high temperatures in pressurized digesters, forming a liquid stream consisting of pulp and black liquor. After a washing step, the resulting pulp is sieved, washed, and bleached to produce paper; and the now weak black liquor continues to the chemical recovery loop into the evaporators.

After passing through multiple evaporators, the now

concentrated black liquor enters the recovery boiler, where sodium sulfate « Na_2SO_4 » is reduced to Na_2S . Then, the green liquor (containing mostly Na_2S and sodium carbonate « Na_2CO_3 »), is sent to the causticizing plant to react with lime « CaO » and regenerate white liquor for the pulping process. Here, the recovery cycle is completed.

In the Kraft recovery cycle, the constant monitoring of residual effective alkali «REA» of black liquor, total titratable alkali «TTA», active alkali «AA», and effective alkali «EA» of green and white liquor, are necessary for maintaining the optimal recovery process, improving reaction yield, and enhancing process optimization. However, these streams are very hot and corrosive (like white liquor), thus there are risks of accidents when sampling manually.

APPLICATION

The 2060 Process Analyzer is used to determine alkali (AA, EA, and TTA), carbonate, hydroxide, sulfide, and causticizing degree «CE%» online in pulping liquors. The analyzer is suitable to analyze white, green, black,

It is also important to consider that variations in one part of the cycle will disturb downstream unit operation. In turn, these disturbances can create further variations, causing a downward spiraling effect. Conventional laboratory analysis leads to long response times between the sampling and the analysis in case of process changes, undermining the recovery efficiency.

A great choice for online monitoring alkali, carbonate, hydroxide, and other such important parameters in pulping liquors is the **2060 Process Analyzer** from Metrohm Process Analytics. Save time, avoid spillages, and increase efficiency without manually sampling process points.

and wash liquors with multiple sample lines, outputting results for closed loop control. This method conforms to the standard method SCAN-N 30:85, the pulp and paper industry standard.

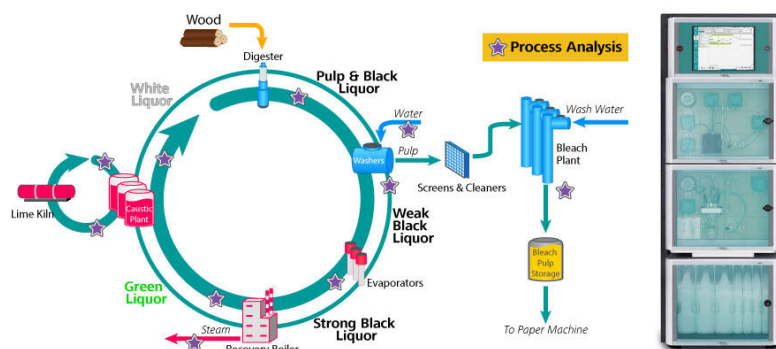


Figure 1. (left) Typical Kraft sulfate pulping and recovery process. (Right) 2060 Process Analyzer for ABC titration measurements for the pulp and paper industry.

TYPICAL RANGE

0.1–3 mol/L CO_3^{2-} and S^{2-} , 0.1–6 mol/L OH^- , alkali 0.1–8 mol/L. Higher and lower ranges are possible

with the use of special preconditioning systems.

REMARKS

Additionally, the **sulfate concentration** can be measured online with thermometric titration in the same instrument. In combination with the ABC titration, this gives a perfect indication for the **degree of reduction** and information about the recovery

boiler efficiency, which acts as a reactor. The thermometric titration gives a faster response and avoids the use of toxic chemicals. Other online applications in the pulp and paper industry are during the bleaching process.

BENEFITS FOR ONLINE TITRATION IN PROCESS

- Increased causticizing efficiency
- Reduced TTA and EA variability
- Greater and faster return on investment
- Safe working environment and automated sampling

CONTACT

Metrohm Suisse SA
Industriestrasse 13
4800 Zofingen

info@metrohm.ch

CONFIGURATION



2060 Process Analyzer

Le 2060 Process Analyzer est un appareil d'analyse par voie humide online adapté à un grand nombre d'applications. Cet appareil d'analyse de processus propose un nouveau concept de modularité reposant sur une plate-forme centrale, dénommée « armoire de base ».

Cette armoire de base se compose de deux parties. La partie supérieure contient un écran tactile et un PC industriel. La partie inférieure contient la partie humide flexible dans laquelle est logé le matériel nécessaire à l'analyse en elle-même. Si la capacité de base de la partie humide n'est pas suffisante pour résoudre un problème d'analyse, vous pouvez ajouter jusqu'à quatre armoires de partie humide supplémentaires à cette armoire de base afin de disposer de suffisamment d'espace pour résoudre les applications les plus difficiles. Les armoires supplémentaires sont configurables de manière à ce que chaque armoire pour partie humide puisse être combinée à une armoire à réactifs avec détection de niveau intégrée (sans contact) afin d'augmenter la disponibilité de l'appareil d'analyse.

Le 2060 Process Analyzer propose différentes techniques de chimie par voie humide : le titrage, le titrage Karl Fischer, la photométrie, la mesure directe et des méthodes d'addition standard.

Pour répondre à toutes les exigences de projet (ou à tous vos besoins), des systèmes de préconditionnement d'échantillons peuvent être fournis afin de garantir une solution analytique robuste. Nous pouvons pour ainsi dire fournir tout système de pré-conditionnement d'échantillon, tels que refroidissement ou chauffage, réduction de la pression, dégazage, filtration et bien plus encore.